

Mobile Scrap Shear

Model

AMS100-R

AMS100-NR

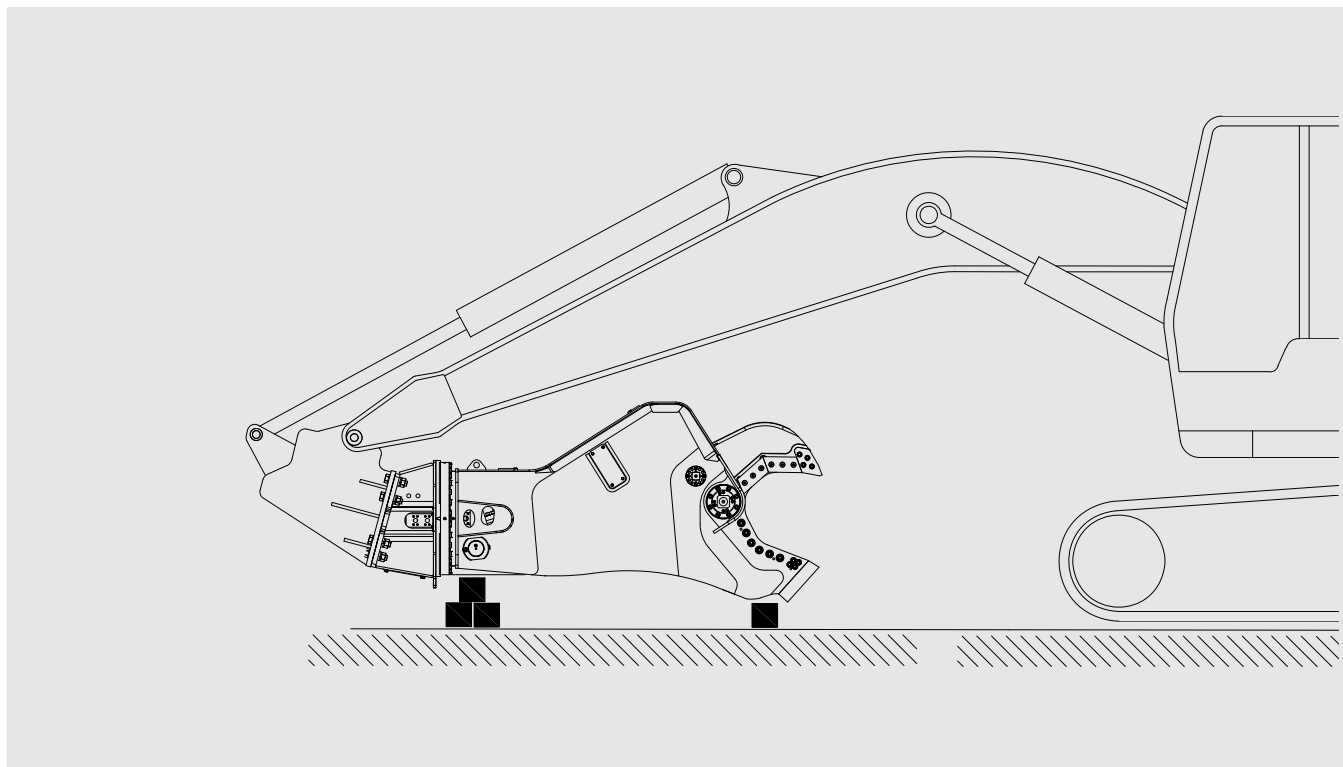

Parts Manual - AMS100 Series

Keep this manual in a convenient location so that it is easily accessible for future reference. Contact your Allied Dealer or the Allied Customer Service Department for replacement manuals.



PM576000

Inquiries regarding this manual must include effective date shown on inside cover



Contact Information

Allied Construction Products, LLC

3900 Kelley Ave

Cleveland, Ohio 44114

Tel: 216-431-2600

Fax: 216-431-2601

www.alliedcp.com

E-mail: sales@alliedcp.com

Revision History of Document 576000

Allied Construction Products, LLC reserves the right to change, edit, delete or modify the content of this document, including descriptions, illustrations and specifications without prior notification. Specifications are based on published information at the time of publication. Go to www.alliedcp.com for product or document updates.

<u>Effective Date</u>	<u>Page</u>	<u>Summary of Change</u>
Apr 2, 2012	All	1st Edition 576000_release12apr
May 8, 2012	4	Revise rotation & drain location Fig. A, Revise Tables 3.1, 3.2 – add label 576092.
Apr, 2013		Revise parts tables and figures to include AMS100-NR 576202.

Table of Contents

<u>Section</u>	<u>Page</u>
Document Revisions.....	i
Table of Contents.....	ii
List of Figures.....	ii
1.0 Introduction & Scope.....	1
1.1 Purpose of This Manual.....	1
1.2 How To Order Replacement Manuals	1
1.3 Related Publications.....	1
2.0 Equipment Identification.....	2
2.1 Serial Number Location.....	2
2.2 Equipment Identification Label.....	2
2.3 Owner's Record of the Equipment.....	2
3.0 Spare Parts Identification.....	3
3.1 Safety & Information Labels.....	3
3.2 Sub-assemblies.....	6
3.2.1 Shear Body Assembly.....	7
3.2.2 Lower Jaw Assembly.....	9
3.2.3 Upper Jaw Assembly.....	11
3.2.4 Subhead & Rotation Assembly.....	13
3.2.5 Cylinder Assembly.....	15
3.2.6 Hydraulic Swivel Assembly.....	17
3.2.7 Hydraulic Hose Assembly.....	19
3.2.8 Hydraulic Connections.....	21
4.0 How To Order Spare Parts.....	22

<u>List of Figures</u>	<u>Page</u>
Fig. 2-1 Equipment Identification.....	2
Fig. 2-2 Equipment Identification Tag.....	2
Fig. 3.1-3.9 Safety & Information Labels...	3
Fig. "A" Location of Labels On Equipment	4
Fig. "B" Location of Lubrication Labels.....	4
Fig. 0890-00.00.0 Sub-Assemblies.....	6
Fig. 0890-01.00.0 Shear body.....	7
Fig. 0890-02.00.0 Lower Jaw.....	9
Fig. 0890-03.00.0 Upper Jaw.....	10
Fig. 0890-04.00.0 Subhead & Rotation....	11
Fig. 0890-05.00.0 Hydraulic Cylinder.....	13
Fig. 0890-06.00.0 Hydraulic Swivel.....	15
Fig. 0890-07.00.0 Hydraulic Hoses.....	17
Fig. 0890-09.00.0 Hyd Conn AMS-R.....	19
Fig. 0890-09.00.0 Hyd Conn AMS-NR.....	20

1.0 Introduction and Scope

1.1 Purpose of This Manual

The Parts Manual has been prepared to assist with the identification of parts used in the assembly of the product named in Table 1.1. Figures are for purposes of parts identification and are not intended for use in the repair or service. Material presented in this manual, including illustrations and descriptions, may not be suitable for other models and is intended solely for use with the equipment identified in Table 1.1. Illustrations, descriptions and parts tables may show equipment that is optional.

Content included in the Parts Manual:

- Components are identified through the use of illustrations, item key, part name, quantity and description.
- Order information for the replacement of the safety and information labels displayed on the equipment.
- An order form is provided at the back of this manual
- Parts Manuals do not include safety precautions

Prior to ordering parts, confirm that the information recorded on the equipment's identification label corresponds with Table 1.1. For the location of this label, refer to Section 2.0.

Table 1.1 About This Manual



Document ID.	PM576000
Category	Spare Parts
Current Status*	See Inside Cover
Product Name:	Mobile Shear
Applicable Model[s]:	AMS100R, AMS100NR
Years of Manufacture:	2012
*Inquiries regarding this manual must include effective date shown on inside cover	

The document identified in Table 1.1 is published solely for information purposes and should not be considered all-inclusive. If further information is required, contact your local Allied dealer or the Allied Customer Service Department.

The content of this document has been reviewed for accuracy. Allied Construction Products, LLC has endeavored to deliver the highest degree of accuracy possible and has made every effort to provide information as complete as possible. However, continuous improvement of our products is an Allied policy. The material in this publication, including descriptions, illustrations and specifications, describes the product at the time of its printing, and may not reflect the product in the future. Changes made to the content of this document are noted on the inside cover.

1.2 How To Order Replacement Publications

This manual is an integral part of this product. Keep it in a convenient location so that it is easily accessible for future reference. If replacement manuals are required, they may be ordered by contacting your Allied dealer service center. These manuals may also be viewed and downloaded at: www.alliedcp.com

1.3 Related Publications

Allied Construction Products, LLC offers the following publications for the product identified in Table 1.1.

Safety, Operation & Maintenance Manual 575886

For use with standard models AMS30, AMS40, AMS50, AMS100, equipped with and without rotation.

This manual has been prepared to assist the operator and maintenance personnel with the information necessary for the safe and proper use of the Allied Equipment.

Content included in the Safety, Operation & Maintenance Manual:

- Safety Information
- Equipment Identification
- Technical Data (Weight & dimensions)
- Installation and Set-up
- Pre-Operation Inspection
- How to Operate the Equipment
- Maintenance Schedule
- Lubrication
- Cutting Blades – Inspection / Changing
- Basic Troubleshooting Guidelines
- Transporting, Removal, Lifting, & Storage

2.0 Equipment Identification

2.1 Serial Number Location

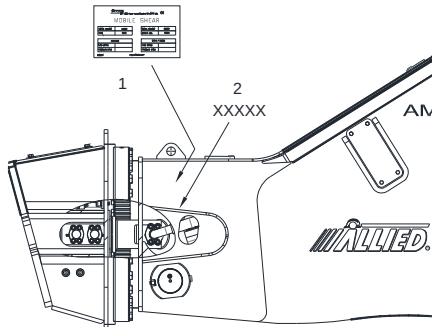


Fig 2-1 Equipment Identification

Refer to Figure 2-1. The Serial Number assigned to this equipment is found in the following locations:

1. On the Equipment Identification Label.
2. Stamped on the guard.

2.2 Equipment Identification Tag

300 Valley Avenue Cleveland OH 44114 USA CE			
MOBILE SHEAR			
MODEL NUMBER	AMS100	SERIAL NUMBER	80000
YEAR	2012	WEIGHT LBS.	13825
NOTATION		OPEN / CLOSE	
FLOW (GPM)		FLOW (GPM)	
PRESSURE (PSI)		PRESSURE (PSI)	
848001 www.alliedcp.com			

Fig 2-2 Equipment Identification Label

The Equipment Identification Tag is affixed to the housing. It provides the following information:

- Manufacturer's name
- Address
- Product name
- Model number
- Serial number
- Year of manufacture
- Weight

Confirm that the information contained on the Tag corresponds with the information provided in Section 1, Table 1.1.

2.3 Owner's Record of the Equipment

- Record the Model and Serial Number from the Equipment Identification Tag to the space provided below.
- Indicate the date in which the Allied equipment was placed into service.

Model / Part Number: AMS-100R / 575820

Model / Part Number: AMS-100NR / 576202

Serial Number: _____

In Service Date: _____

Product Registration Date _____

- Your local Allied dealer requires this information to better assist you with questions regarding parts, warranty, operation, maintenance, or repair.

Register this equipment by returning the completed warranty registration form to Allied.




 

3.0 Spare Parts Identification

3.1 Safety and Information Labels

Information labels affixed to the Allied equipment include safety warnings, identification and instructions important to operation and service. Table 3.1 identifies and describes each label.

 




Words and illustrations must be readable. Keep all safety labels clean. Replace damaged or missing labels before operating this equipment. Refer to Table 3.2 for ordering information. Refer to Figure "A" and "AA" for their location on the equipment.

Table 3.1 Safety and Information Labels

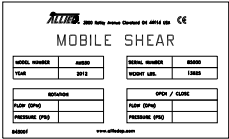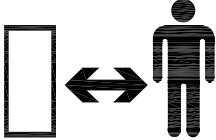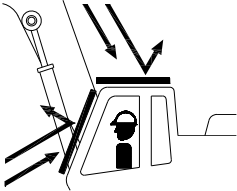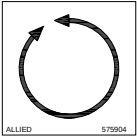Figure	Label	Description
1		EQUIPMENT ID - Contains identifying information about the equipment, including: Product name, model number, serial number, company name and address.
2		SAFETY ALERT SYMBOL / READ INSTRUCTIONS - Directs personnel to the manual for safety-related precautions, further information / instructions.
3		STAY CLEAR – Alerts personnel and by-standers to maintain a safe distance from the work tool during operation.
4		PROJECTILE HAZARD – Alerts of the need for a protective guard to shield the operator from debris generated when the work tool is in operation.
5		LIFT POINT – Marks lift points for safe handling of the work tool.
6		LUBRICATION – Marks lubrication points on the equipment.
7		ROTATION – Marks the location of hydraulic connection port for motor rotation. Pictogram indicates rotation is bi-directional 360°. (Applicable only to AMS-R models equipped with Rotation).

3.1 Spare Parts Identification

Table 3.1 Safety and Information Labels [cont'd]

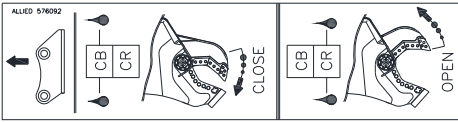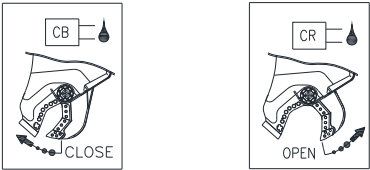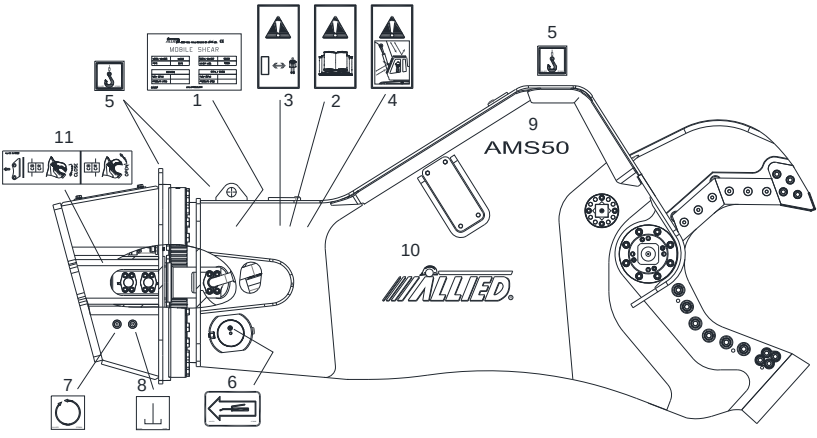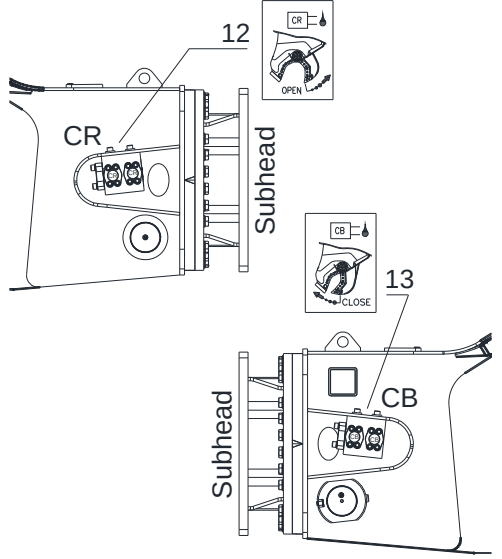Figure	Label	Description
8		MOTOR CASE DRAIN CONNECTION – Marks the location of the connection port for the hydraulic motor's case drain. Hydraulic symbol, used in standard fluid power, identifies connection to tank. (Applicable only to AMS-R models equipped with Rotation).
9	AMS100	MODEL – Identifies the Model of the Allied Mobile Shear
10		ALLIED LOGO – The Allied brand identifier and is a registered trademark of Allied Construction Products, LLC.
11		MODELS EQUIPPED WITH ROTATION - HYDRAULIC SWIVEL CONNECTIONS "CB" and "CR" - Figures showing oil flow to the hydraulic swivel and action of jaw. Ports nearest bracket are stamped "CB" (Cylinder Barrel). Ports nearest to slewing bearing are stamped "CR" (Cylinder Rod). Observe the orientation arrow displayed above the mounting bracket when applying labels on the LH & RH sides of the subhead.
12,13		MODELS WITHOUT ROTATION - HYDRAULIC CONNECTIONS "CB" and "CR" – Oil drop next to connection port and action of jaw open / close. Oil flow at CB connection closes jaw. Oil flow at CR connection opens jaw.
 Fig. "A" Label Position – AMS-R Shown  Fig. "AA" Label Position – AMS-NR Shown		

Some illustrations may not be applicable to both AMS-R and AMS-NR
 R) Rotation
 NR) Non-Rotation

3.1 Spare Parts Identification

Table 3.2 Order Information For Safety & Information Labels

Pos	Part Name	Part No.	Specification	Qty	Note
---	Label Set	576056	AMS-R Includes Items 2-11	1	
---	Label Set	576594	AMS-NR Includes Items 2-6,9,10,12,13	1	
1	Label	845001	Equipment ID	1	1
2	Label	676984	Pictogram, Read Instructions	2	
3	Label	840156	Pictogram, Stay Clear	2	
4	Label	575948	Pictogram, Guards Installed	2	
5	Label	676982	Pictogram, Lift Point	3	3
6	Label	676985	Pictogram, Lube Point	12,(6)	3,(6)
7	Label	575904	Pictogram, Rotation	2	3
8	Label	575905	Pictogram, Case Drain Line Connection	2	
9	Label	575907	Model AMS 100	2	
10	Label	676656	Allied Logo	2	
11	Label	576092	Pictogram, CB / CR Cylinder Action Open & Close	2	2,3
12	Label	576602	CR= Cylinder Rod Jaw Open	1	4
13	Label	576603	CB= Cylinder Barrel Jaw Close	1	4

Notes

- 1: Item not included in label set
- 2: Apply label to LH & RH side of the subhead while observing the arrow's orientation of the mounting bracket.
- 3: Label not included in "NR" type label set. "NR" label set Lube Qty reduced to (6).
- 4: Label not included in "R" type label set.

Table 3.3 Lubrication Points

Pos	Part Name	Qty
A	Gear, slewing ring	2
B	Bearing, slewing ring	4
C	Cylinder pin (bottom end)	2

Pos	Part Name	Qty
D	Auto-guide/Puck	1
E	Main shaft	2
F	Cylinder pin (rod eye)	1

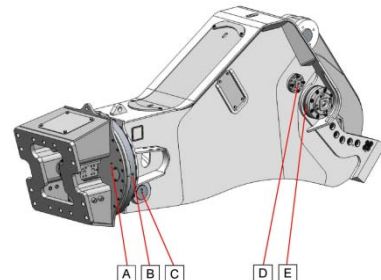
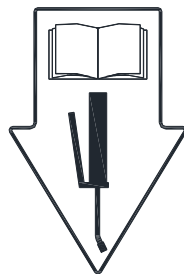
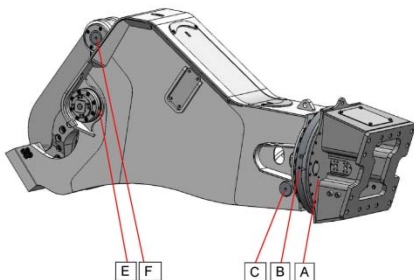


Fig. B Lubrication Points

*Lubrication points A & B are not applicable to AMS-NR

3.2.0 Spare Parts Identification

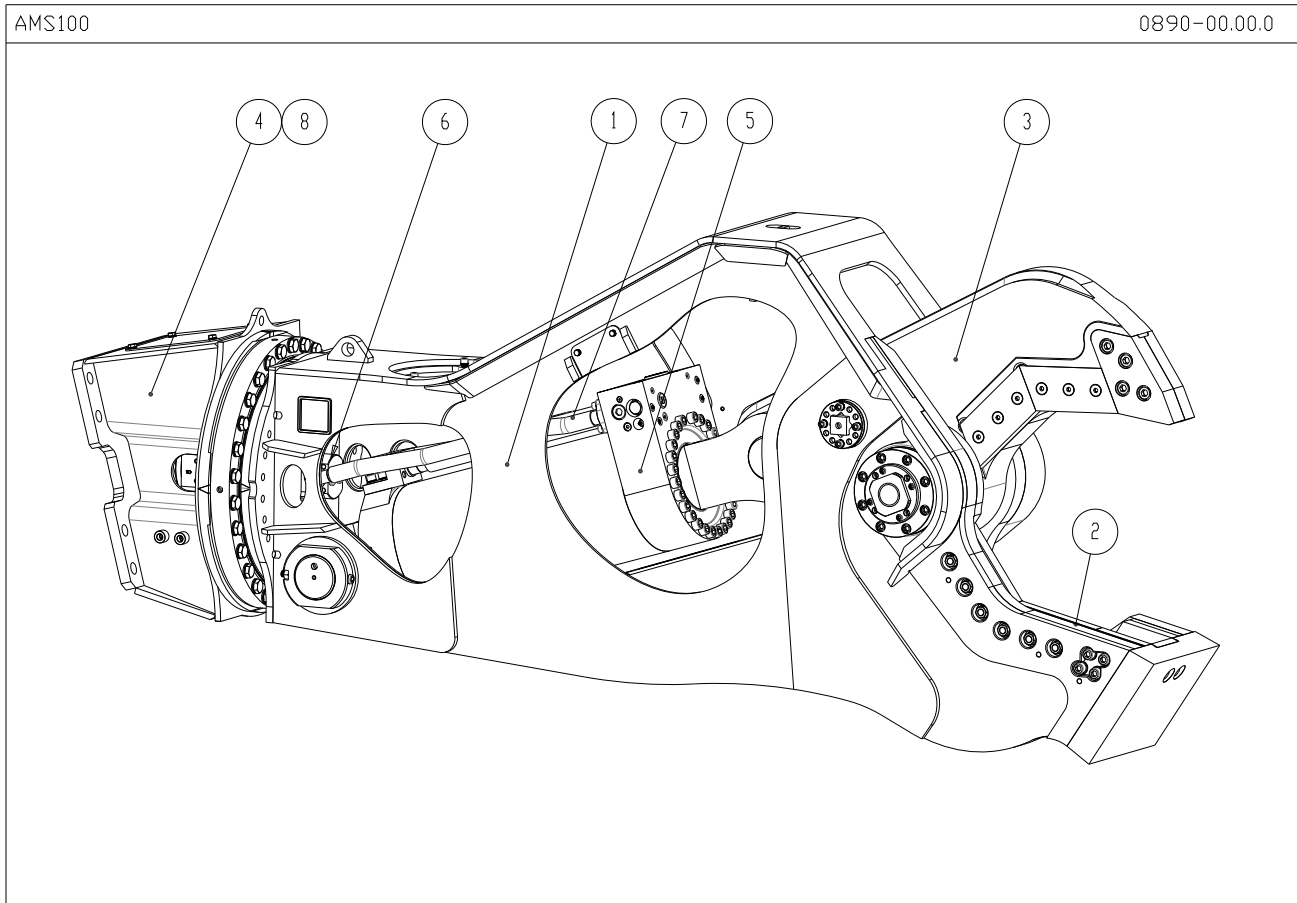


Fig. 0890-00.00.0 AMS100-R Model Shown

Table 3.4 Scrap Shear Sub-Assemblies

Pos	Part Name	Assembly	Figure	Page	Section	Table
1	Shear Body Assembly	0890-01.00.0	0890-01.00.0	7	3.2.1	3.5
2	Lower Jaw Assembly	0890-02.00.0	0890-02.00.0	9	3.2.2	3.6
3	Upper Jaw Assembly	0890-03.00.0	0890-03.00.0	10	3.2.3	3.7
4*	Subhead & Rotation Ass'y	0890-04.00.0	0890-04.00.0	11	3.2.4	3.8
5	Cylinder Assembly	0890-05.00.0	0890-05.00.0	13	3.2.5	3.9
6*	Hydraulic Swivel Ass'y	0890-06.00.0	0890-06.00.0	15	3.2.6	3.10
7	Hydraulic Hoses	0890-07.00.0	0890-07.00.0	17	3.2.7	3.11
8	Hydraulic Connections	0890-08.00.0	0890-08.00.0	19	3.2.8	3.12
---*	Hoses Inside Subhead	0890-09.01.0	0890-09.01.0	21	3.2.9	3.13

*AMS-R Parts are applicable only to models equipped with Rotation.

3.2.1 Spare Parts Identification

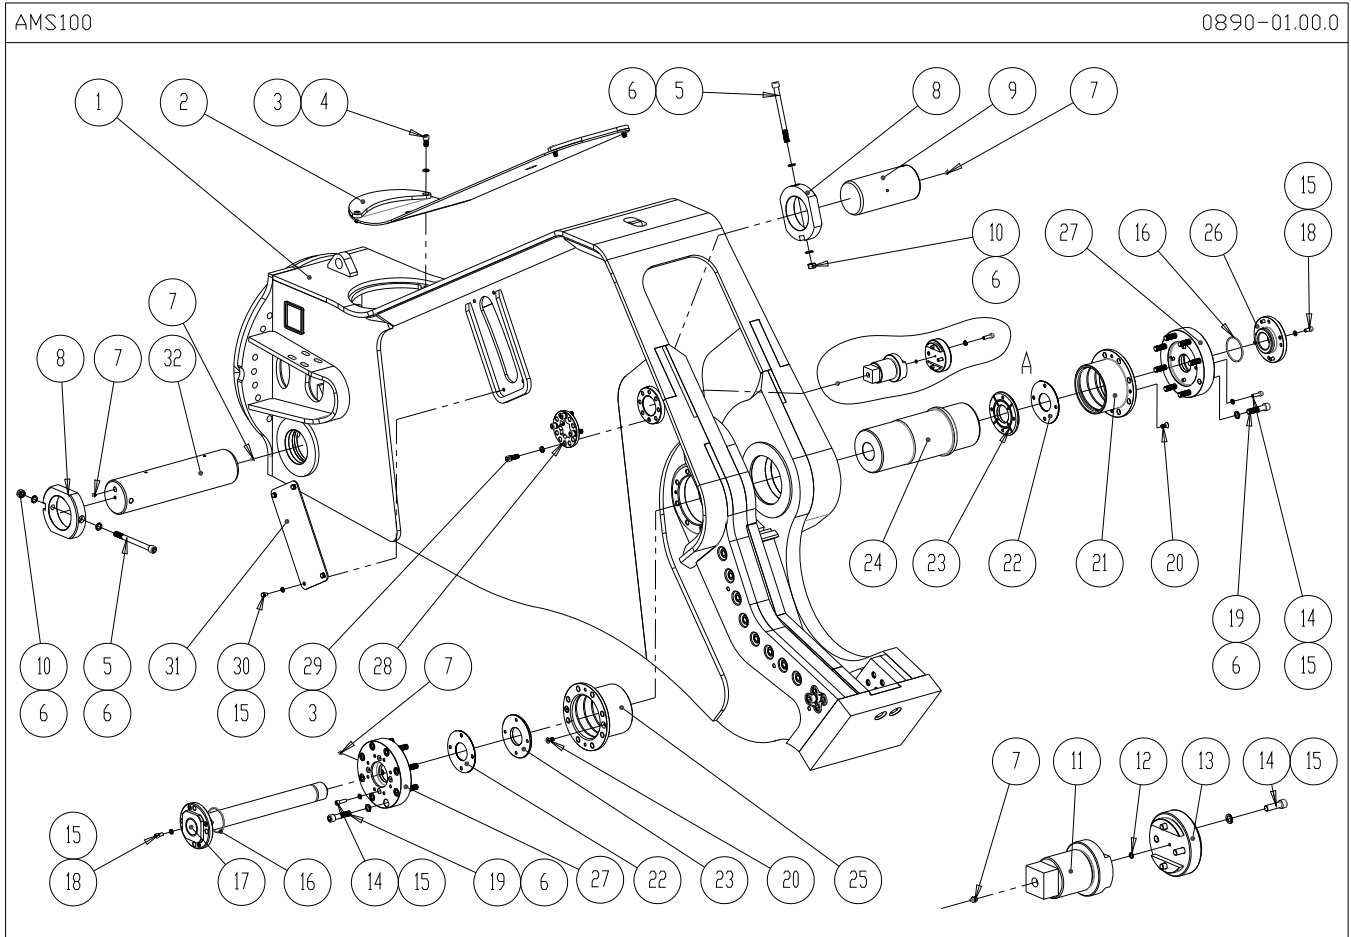


Fig. 0890-01.00.0

3.2.1 Spare Parts Identification

Table 3.5 Shear Body Assembly 0890-01.01.0

Pos	Part Name	Part No.	Specification	Qty	Note
1	Shear Body	PR0890200		1	1
2	Main Cover	PR0890007		1	
3	Washer	90597	16 (NL Pair)	8	
4	Socket Head Bolt	951620	M16 x 30	4	
5	Socket Head Bolt	575812	M20 x 240	2	
6	Washer	91010	M20 (NL Pair)	20	
7	Lubrication Fitting	90201		6	
8	Pin Keeper	PR0850020		2	
9	Pin	PR0850021	Front	1	
10	Hex Nut	575811	M20	2	
11	Slide Screw	PR0850008		1	
12	Kant Seal	ZZOR009340165K	ID ø9.34x1.68	1	
13	Slide Puck	PR0840025		1	
14	Socket Head Bolt	90564	M12 x 40	12	
15	Washer	91012	M12 (NL Pair)	28	
16	O-Ring	ZZOR10000590	Ø100x5	2	
17	WLDT Tie Rod	PR.08500180		1	
18	Socket Head Bolt	575816	M12 x 25	8	
19	Socket Head Bolt	900005	M20 x 90	16	
20	Flat Head Socket Bolt	575818	M12 x 30	4	
21	Main Bearing	PR0850013	L.H.	1	
22	Shim Set	PR0850044	Pivot Group	1	
23	Thrust Bearing	PR0850011		2	
24	Main Shaft	---		1	1
25	Main Bearing	PR0850012	R.H.	1	
26	Nut	PR0850016	Tie Rod	1	
27	End Cap	PR0850014		2	
28	Lock	PR0840044		1	
29	Socket Head Bolt	91005	M16 x 45	4	
30	Hex Head Bolt	575838	M12 x 16	8	
31	Cover	PR08900030	Side	2	
32	Pin	PR08500090	Rear	1	

Note:

1. Item Non-serviceable

3.2.2 Spare Parts Identification

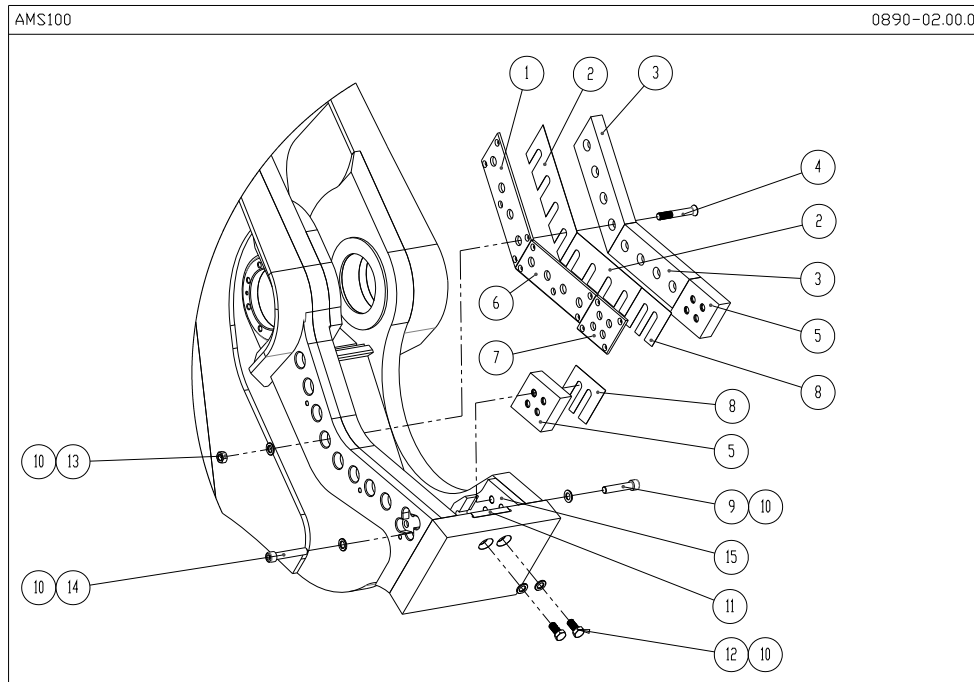


Fig. 0890-02.01.0

Table 3.6 Lower Jaw Assembly Fig. 0890-02.01.0

Pos	Part Name	Part No.	Specification	Qty	Note
---	Blade Kit Complete	575928		1	1
1	Adjustment plate	PR0890011	Lower Blade	1	2
2	Shim	PR0890024	Lower Blade	2	
3	Blade	PR0890001	Lower	2	
4	Flat Head Socket Bolt	575503	M24 x 160	8	
5	Guide Blade	PR0850005	Lower	2	
6	Adjustment Plate	PR0890010	Lower Blade	1	2
7	Adjustment Plate	PR0850031	Guide Blade	1	2
8	Shim	PR0850042	Guide Blade	2	
9	Socket Head Bolt	575505	M24 x 120	4	
10	Washer	90511	Structural M24	18	
11	Razor Blade	PR0850002		1	
12	Hex Head Bolt	575467	M24 x 50	2	
13	Hex Nut	667220	M24	8	
14	Socket Head Bolt	575671	M24 x 140	4	
15	Guide Blade Seat	PR0850028		1	

Note:

1. Blade Kit contains all blades, fasteners and shim sets. Adjustment plates excluded.
2. Adjustment plates are serial number specific. Contact Allied.

3.2.3 Spare Parts Identification

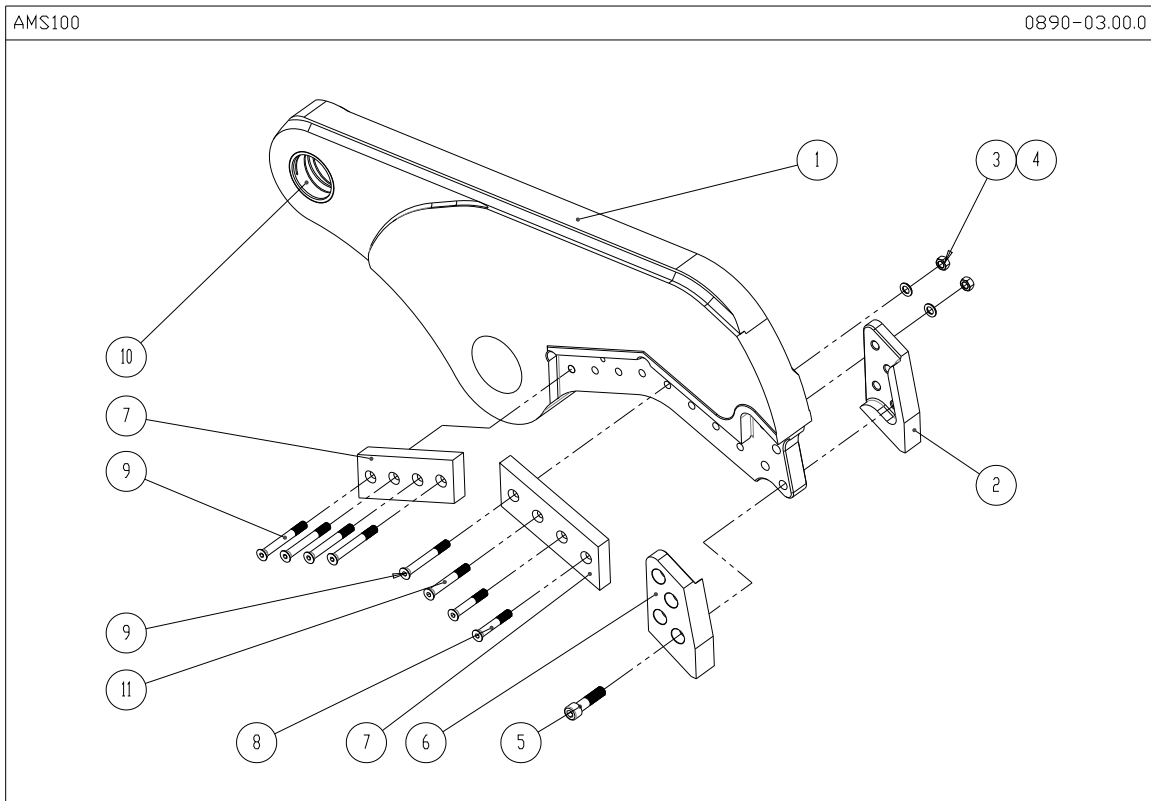


Fig. 0890-03.00.0

Table 3.7 Upper Jaw Assembly Fig. 0890-03.01.0

Pos	Part Name	Part No.	Specification	Qty	Note
---	Blade Kit Complete	575928		1	1
1	Jaw	---	Upper	1	2
2	Blade Tip	PR0850007	Right	1	
3	Hex Nut	667220	M24	8	
4	Washer	90511	Structural M24	8	
5	Socket Head Bolt	575672	M30 x 120	4	
6	Blade Tip	PR0850006	Left	1	
7	Blade	PR0890001	Upper / Lower	2	
8	Flat Head Socket Bolt	575673	M24 x 150	2	
9	Flat Head Socket Bolt	575674	M24 x 200	5	
10	Bearing	PR0850010	Upper	1	
11	Flat Head Socket Bolt	575504	M24 x 180	1	

Note:

1. Blade Kit contains all blades, fasteners and shim sets. Adjustment plates excluded.
2. Non- serviceable item

3.2.4 Spare Parts Identification

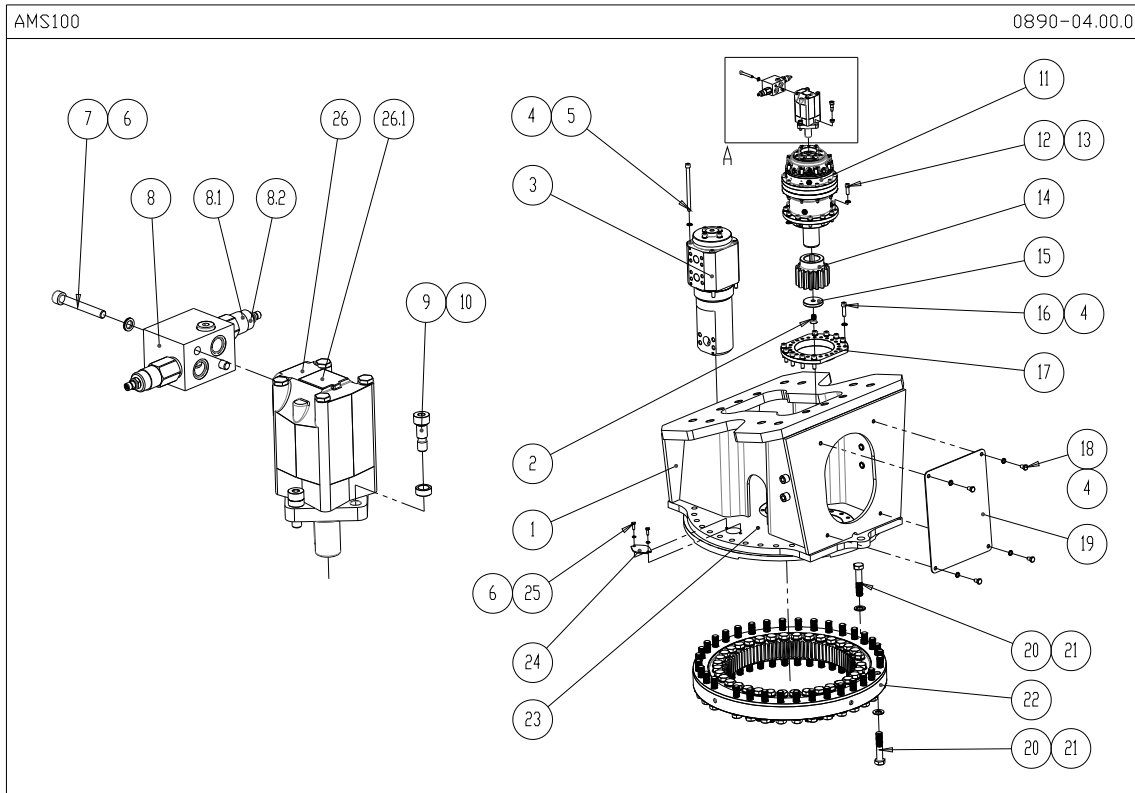


Fig. 0890-04.00.0 Rotation Assembly

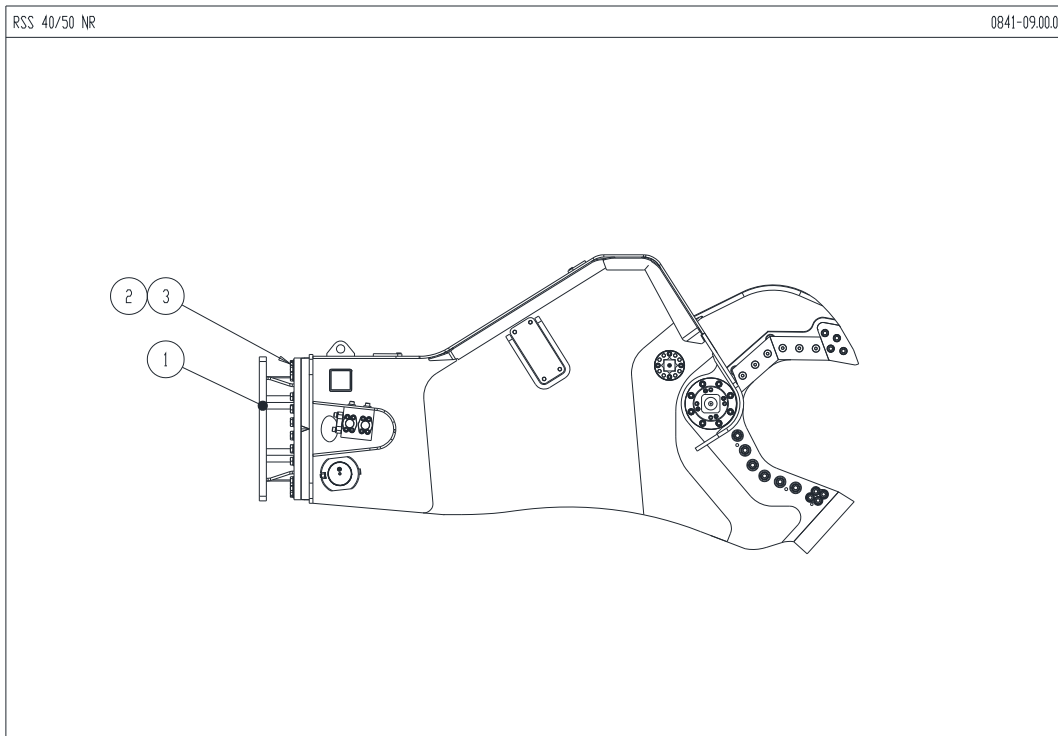


Fig. Non-Rotation Subhead

3.2.4 Spare Parts Identification

Table 3.8 Subhead and Rotation Assembly Fig. 0890-04.01.0

Pos	Part Name	Part No.	Specification	Qty	Note
1	Subhead	PR0890600		1	R
2	Flat Head Socket Bolt	901287	M20 x 40	1	R
3	Hydraulic Swivel	ZZDD001001564		1	R-1
4	Washer	90597	M16 (NL Pair)	18	R
5	Socket Head Bolt	575505	M16 x 240	4	R
6	Washer	91037	M10 (NL Pair)	6	R
7	Socket Head Bolt	575839	M10 x 75	2	R
8	Manifold	ZZHMB10421VJ25		1	R
8.1	Relief Valve	ZZVBB10113BJ25		2	R
8.2	Seal kit	ZZDS9257725	For Item 8.1	1	R
9	Socket Head Bolt	PR10096200101	M12 16x20 ISO 7379-12.9	4	R
10	Washer	PR10096200102	Custom Flat M12	4	R
11	Gearbox	ZZVK0200	ED 2065/MR1/12.25/00	1	R
12	Socket Head Bolt	576053	M14 x 40	12	R
13	Washer	678569	M14 (NL Pair)	12	R
14	Pinion Gear	PR0890002		1	R
15	Washer	PR0890004		1	R
16	Socket Head Bolt	676163	M16 x 55	10	R
17	Adapter plate	PR0890006	Gearbox ED 2065/MR1	1	R
18	Hex Head Bolt	575840	M16 x 25	4	R
19	Cover	PR0890005		1	R
20	Hex Head Bolt	576054	M30 x 150	71	R
21	Washer	576062	Structural M30	71	R
22	Bearing Slewing Ring	ZZLA0980		1	R
23	Grease fitting	90201	G1/8"	8	R
24	Cover	PR0840014		2	R
25	Hex Head Bolt	056167	M10 x 30	4	R
26	Hydraulic Motor	ZZHM151F0502		1	R
26.1	Seal kit For Item 26	ZZDS151F0111		1	R

Note:

R) Models equipped with Rotation.

1. Refer to Section 3.2.6, Table 3.10

Table 3.9 Non-Rotation Type Subhead Fig. 0841-09.0

Pos	Part Name	Part No.	Specification	Qty	Note
1	Subhead	576315	Non-rotation Type	1	NR
2	Hex Head Bolt	902264	M30 x100	26	NR
3	FI Washer	576062		26	NR

Note:

NR) Non-Rotation models.

3.2.5 Spare Parts Identification

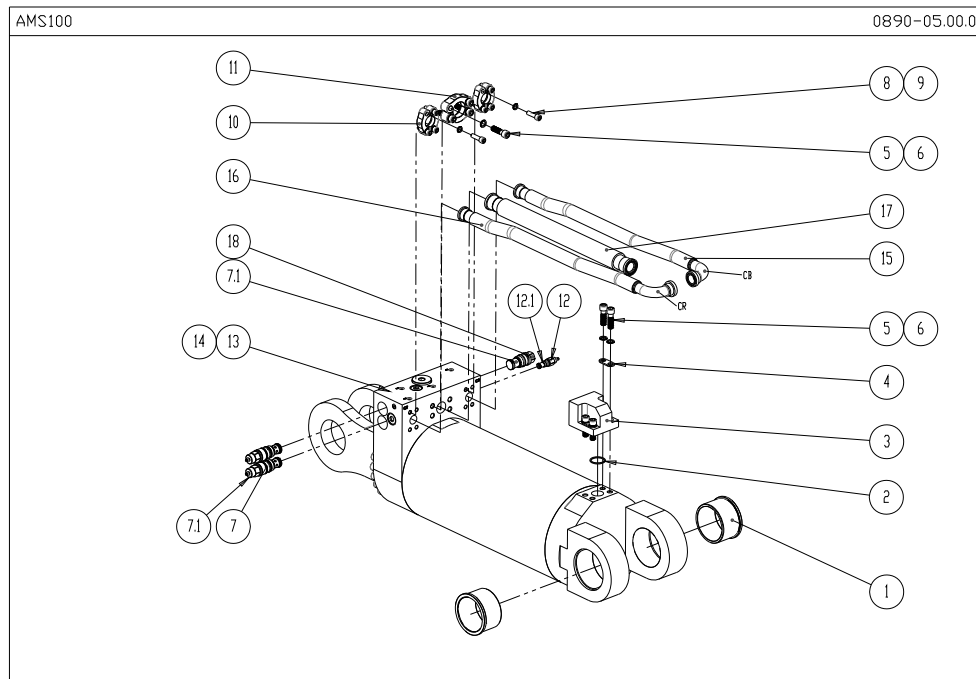


Fig. 0890-05.00.0 (AMS-R)

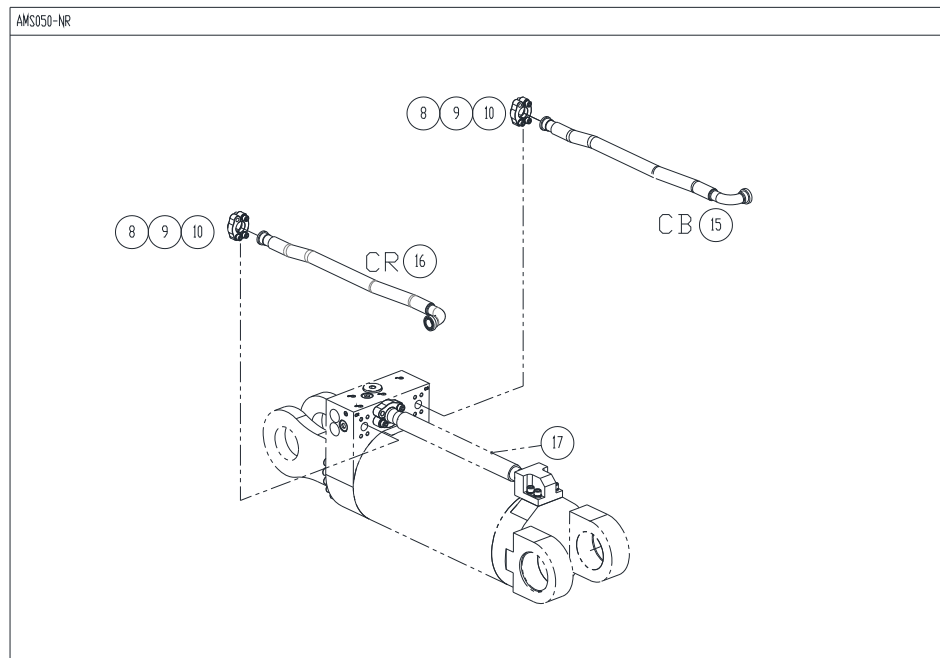


Fig. 0890-05.00.0 Hoses CB and CR (AMS-NR)

Note

R) Models Equipped With Rotation

NR) Non-Rotation Models

CB) Cylinder Barrel - Jaw Close

CR) Cylinder Rod - Jaw Open

3.2.5 Spare Parts Identification

Table 3.10 Cylinder Assembly Fig. 0890-05.01.0

Pos	Part Name	Part No.	Specification	Qty	Note
1	Glide Bush	ZZLA36283		2	
2	Seal	ZZDS14041003200		1	
3	Rear Port Block	PR0840.045.0		1	
4	Support Plate	PR08400460	SAE 2"	2	
5	Washer	91010	M20 (NL Pair)	8	
6	Socket Head Bolt	951478	M20 x 70	8	
7	Counterbalance Valve	ZZVBA912159J25		2	
7.1	Seal Kit For Item 7	ZZDS9330047		1	
8	Socket Head Bolt	679037	M16 x 55 DIN 912-12.9	8	
9	Washer	90597	M16 (NL Pair)	8	
10	Split Flange	ZZSL9981		4	
11	Split Flange	ZZSL9985		2	
12	Relief Valve	ZZVBB10222BJ25	Direct-acting	1	
12.1	Seal kit For Item 12	ZZDS9257725		1	
13	Hydraulic Cylinder	ZZCL001001548	350-220-978	1	
14	Seal Kit For Item 13	ZZDSAFD36283		1	
15	Hose RH (CB Port)	Varies	1,5 inch	1	1
16	Hose LH (CR Port)	Varies	1,5 inch	1	1
17	Hose	ZZSL358	2 inch	1	1
18	Check Valve	ZZVBB10114BJ25	Pilot-to-close	1	

Note:

1. Refer to Section 3.2.7 Table 3.11

CB) Cylinder Barrel - Jaw Close

CR) Cylinder Rod - Jaw Open

3.2.6 Spare Parts Identification

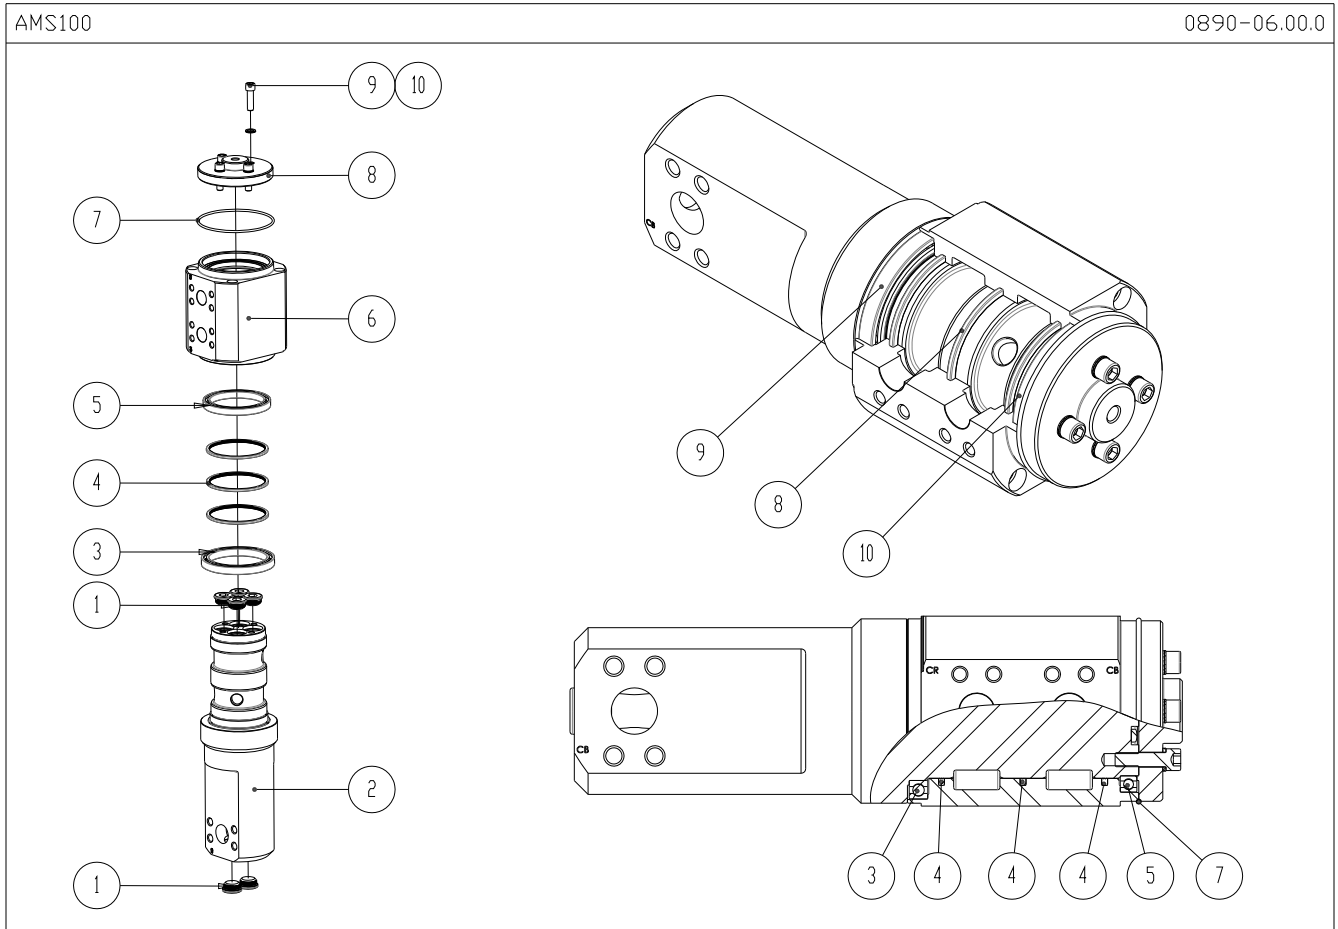


Fig. 0890-06.00.0

Note

R) Models equipped with Rotation

CB) Cylinder Barrel - Jaw Close

CR) Cylinder Rod - Jaw Open

3.2.6 Spare Parts Identification

Table 3.11 Hydraulic Swivel Assembly Fig. 0890-06.01.0

Pos	Part Name	Part No.	Specification	Qty	Note
---	Seal Kit Complete	ZZDS001001564SK			
1	Locking screw	ZZSL7060	VST-R 1 1/4" WD with captive seal	6	
2	Swivel stator			1	2
3	Ball bearing		Ø150x190x20	1	3
4	Rotary Seal	ZZDS001001564SK	Ø145/160.5x6.3	3	1
5	Ball bearing		Ø140x175x18	1	3
6	Housing			1	2
7	O-Ring	ZZDS001001564SK	Ø189.87x5.33	1	1
8	Cover			1	2
9	Washer	90597	M16 (NL Pair)	4	
10	Socket Head Bolt	679037	M16 x 55	4	

Note:

R) Models equipped with Rotation.

1: Seal Kit available only as a complete set. Kit contains items 4 and 7.

2: Non-serviceable item

3: Not available separately. Order seal kit.

4: Special order. Contact Allied

3.2.7 Spare Parts Identification

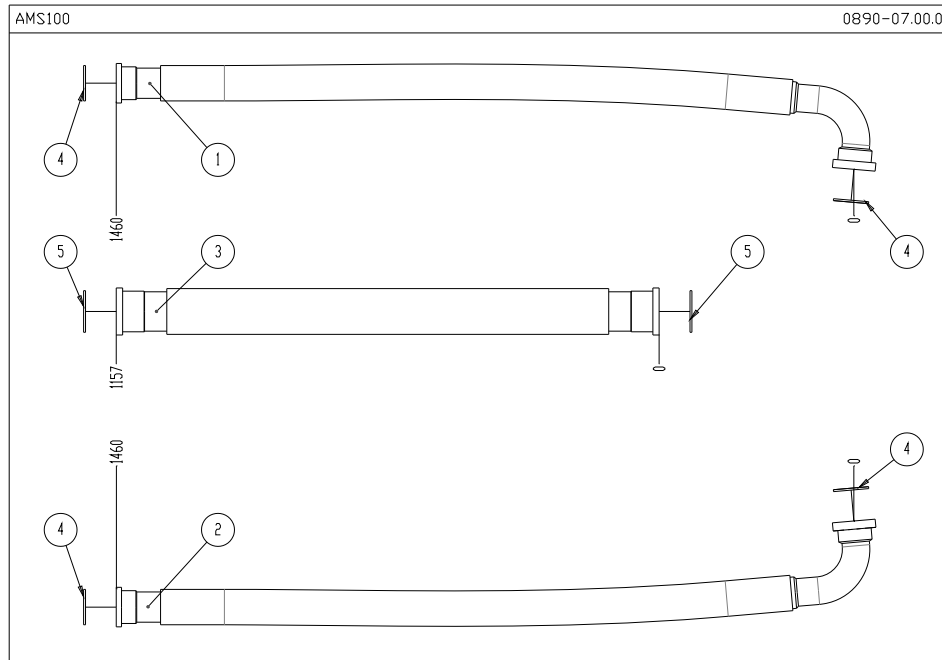


Fig. 0890-07.00.0 R

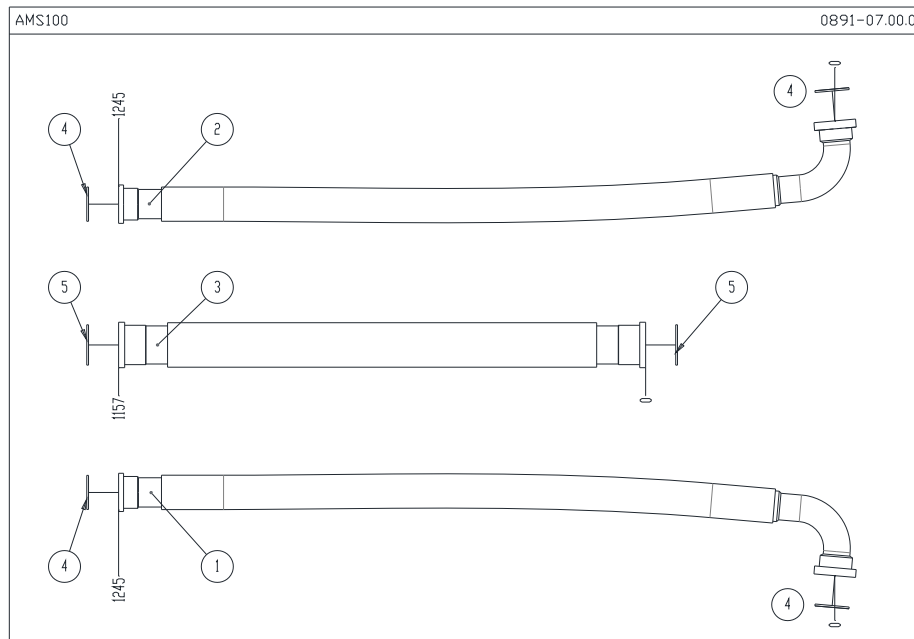


Fig. 0891-07.00.0 NR

Note

R) Models equipped with Rotation
NR) Non-Rotation Models

CB) Cylinder Barrel - Jaw Close
CR) Cylinder Rod - Jaw Open

3.2.7 Spare Parts Identification

Table 3.12 Hydraulic Connections Fig. 0890-07.01.B

Pos	Part Name	Part No.	Specification	Qty	Note
1	Hose	ZZSL357	1.5 inch	1	R-CB
2	Hose	ZZSL357	1.5 inch	1	R-CR
3	Hose	ZZSL358	2 inch	1	
4	O-Ring	657364	1.5 inch	4	
5	O-Ring	ZZDS14041003200	2 inch	2	

Note

R) Models equipped with Rotation

CB) Cylinder Barrel - Jaw Close

CR) Cylinder Rod - Jaw Open

Table 3.13 Hydraulic Connections Fig. 0891-07.01.B

Pos	Part Name	Part No.	Specification	Qty	Note
1	Hose	ZZSL368	1.5 inch	1	NR-CB
2	Hose	ZZSL368	1.5 inch	1	NR-CR
3	Hose	ZZSL358	2 inch	1	
4	O-Ring	657364	1.5 inch	4	
5	O-Ring	ZZDS14041003200	2 inch	2	

Note

NR) Non-Rotation Models

CB) Cylinder Barrel - Jaw Close

CR) Cylinder Rod - Jaw Open

3.2.8 Spare Parts Identification

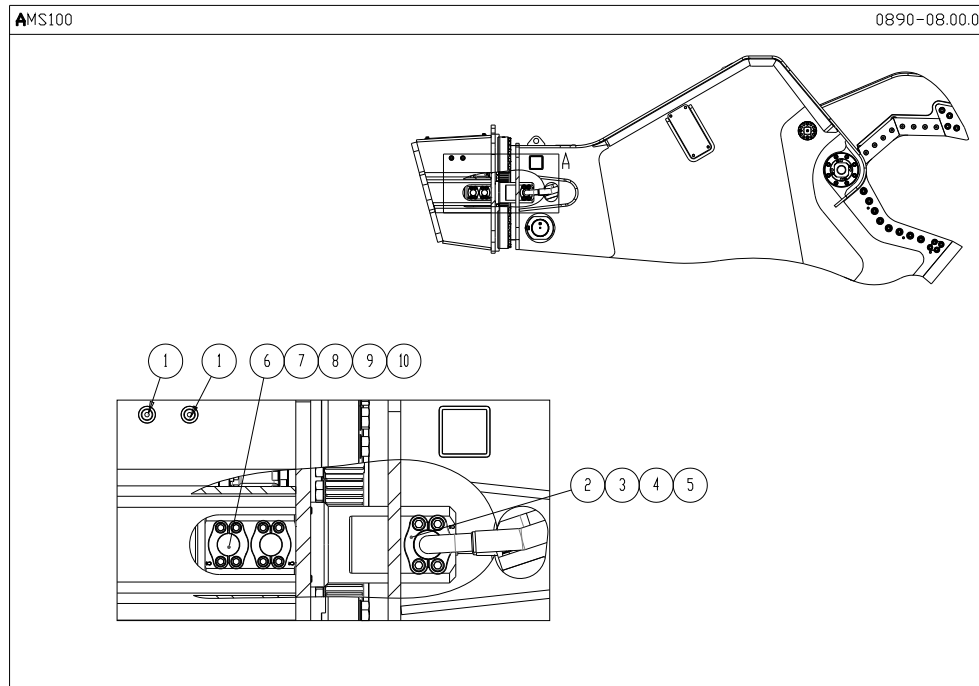


Fig. 0890-08.01.0 AMS-R

Table 3.14 Hydraulic Connections Fig. 0890-08.01.0

Pos	Part Name	Part No.	Specification	Qty	Note
1	Flange Plug	90424	1/2" BSP	4	R
2	Split flange	ZZSL9985	2"	4	R
3	Socket Head Bolt	575843	M20 x 70	8	R
4	Washer	91010	M20 (NL Pair)	8	R
5	HD-Seal	ZZDS14041003200	2"	2	R
6	HD-Seal	657364	1 1/2"	4	R
7	Split flange	053268	1 1/2"	8	R
8	Socket Head Bolt	679037	M16 x 55	16	R
9	Blind flange	ZZSL998101	1 1/2"	4	R
10	Washer	90597	M16 (NL Pair)	16	R

Note

R) Models equipped with Rotation

NR) Non-Rotation Models

CB) Cylinder Barrel - Jaw Close

CR) Cylinder Rod - Jaw Open

3.2.8 Spare Parts Identification

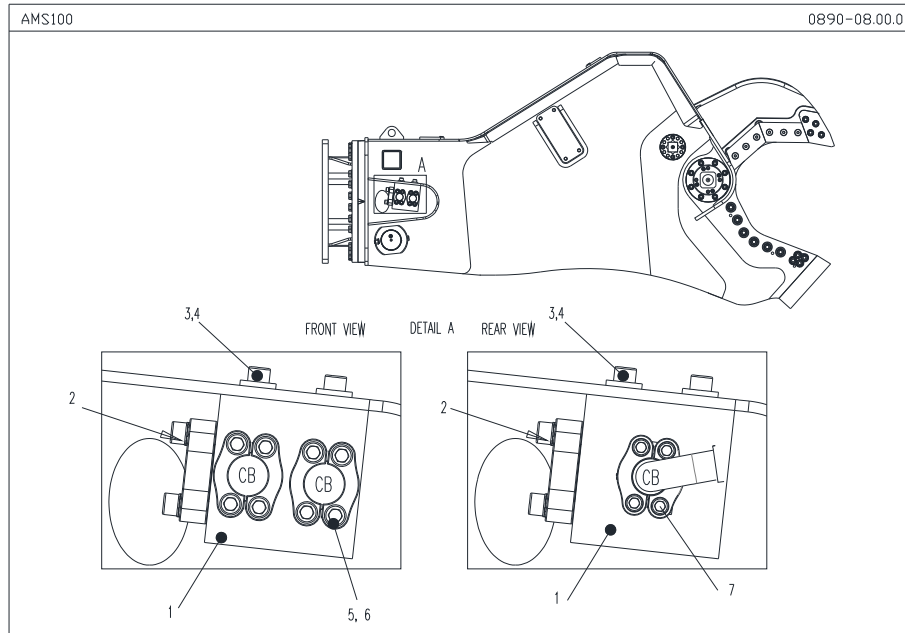


Fig. 0891-08.01.0 Hydraulic Connections AMS-NR

Table 3.15 Hydraulic Connections Fig. 0891-08.01.0

Pos	Part Name	Part No.	Specification	Qty	Note
1	Port Block	576439	CR and CB Side	2	NR
2	4-Bolt Flange Cap	574899	32C62 W/Hardware	2	NR
3	Hex Head Bolt	951049	M16	8	NR
4	FL Washer	719015		8	NR
5	Split Flange Kit	575847	24C62	4	NR
6	Flange Port Plug	573289	24C62	4	NR
7	Split Flange Kit	575848	32C62	2	NR

Note:

NR) Non-Rotation models

CB) Cylinder Barrel - Jaw Close

CR) Cylinder Rod - Jaw Open

3.2.9 Spare Parts Identification

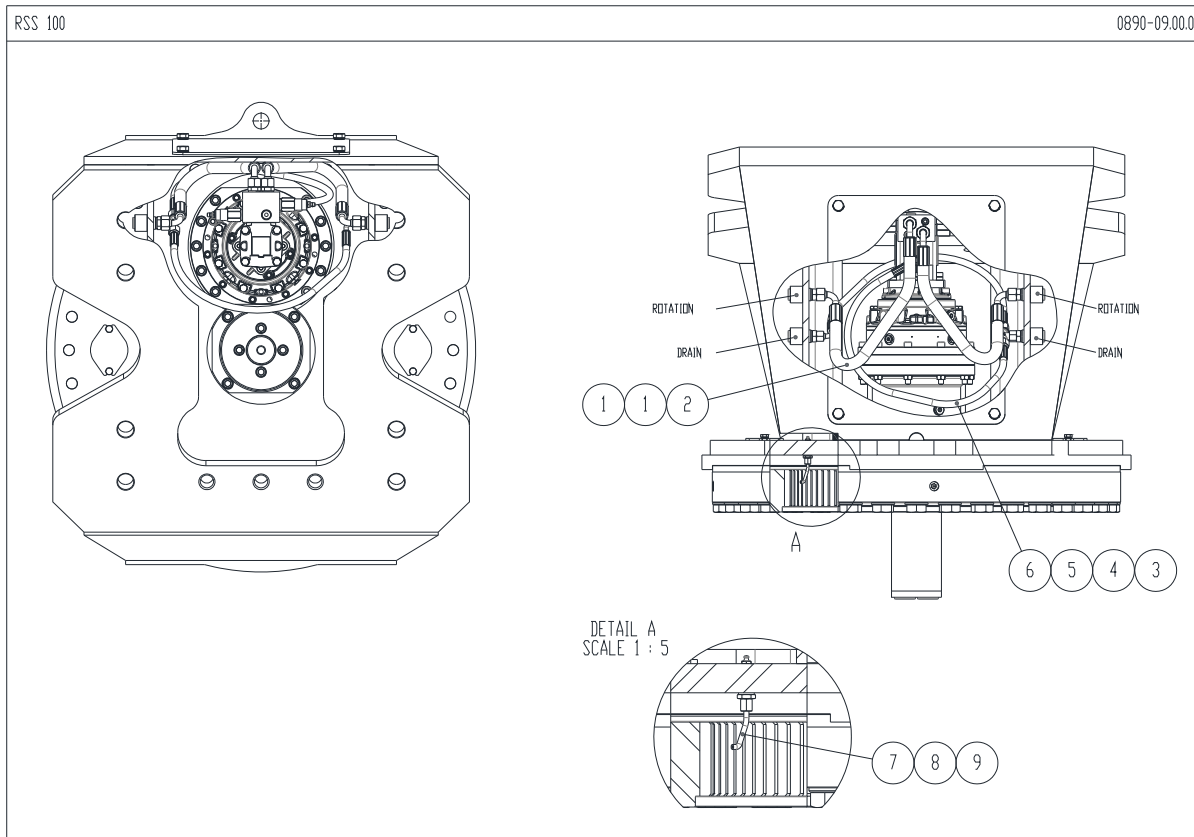


Fig. 0890-09.01.0 Hydraulic Hose Connections Inside Subhead

Table 3.16 Hydraulic Connections Fig. 0890-08.01.0

Pos	Part Name	Part No.	Specification	Qty	Note
1	Straight male stud fitting	ZZSL5163	GE 16 SR 1/2 ED S	4	R
2	Hydraulic hose	ZZSL360		2	R
3	Straight male stud fitting	ZZSL5125	GE 12 SR 1/4 ED S	1	R
4	Straight male stud fitting	ZZSL5129	GE 12 SR 1/2 ED S	2	R
5	Adjustable L-coupling	ZZSL6513	ETD 12 S	1	R
6	Hydraulic hose	ZZSL21		2	R
7	Grease pipe		Ø6x1.5 L=80 mm – Brake line	2	R
8	Grease fitting	ZZBM72240031180		2	R
9	Straight male stud fitting	ZZSL5070	GE 06 LR	2	R

Note:

R) Models equipped with Rotation.

4.0 How To Order Spare Parts

When ordering parts, please provide the name of the Product, Model and Serial Number. See Section 2.3 Owner's record of the equipment.

Product _____

Model _____

Serial No. _____

Please fill out completely

Line	Part Number	Part Name Description	Quantity	Price
1				
2				
3				
4				
5				
6				
7				
8				
9				
10				

Your contact information

Your Name _____ Company Name _____

Phone _____ Account Number _____

Fax _____ Purchase order _____

Email _____ Shipping carrier _____

See note*

Billing Address _____ Shipping Address _____

***Note: All backordered parts will be shipped when available via the same method as the original order unless initialed and checked below:**

Initials

_____ ☐ Ship complete order only

_____ ☐ Ship available parts and contact customer on disposition of backordered parts

_____ ☐ Other – specify below

Notes:

[illegible]



3900 Kelley Avenue, Cleveland, Ohio 44114
Tel: 216-431-2600 Fax: 216-431-2601
e-mail: Sales@AlliedCP.com
website: <http://www.AlliedCP.com>