


## Greasing device

[125R11-0291-UP] [125R13-0291-UP] [RG5320291-UP]

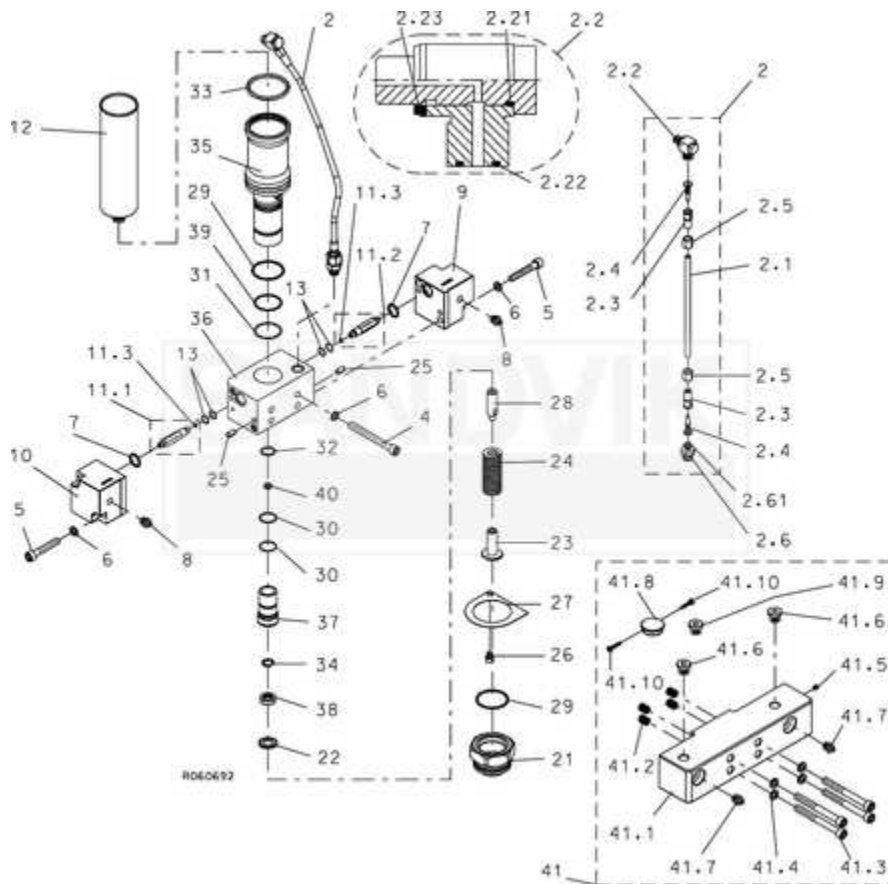

Item	Description	Part no.	Specification	Note	Qty
<b>Kit</b>	<b>Greasing device (incl. parts 1-13)</b>	<b>160382</b>			<b>1</b>
<u>1</u>	Greasing device RG532 (incl. parts 21-40)	154245			1
<u>2</u>	Hose assembly (incl. parts 2.1-2.6)	152665			1
<u>2.1</u>	Hose	951069	L=385 mm		1
<u>2.2</u>	Adapter (incl. parts 2.21-2.23)	152729			1
<u>2.21</u>	O-ring	951092	D11	*	1
<u>2.22</u>	O-ring	951293	D9	*	1
<u>2.23</u>	Seal	951095		*	1
<u>2.3</u>	Sleeve	153035			2
<u>2.4</u>	Insert	153036			2
<u>2.5</u>	Nut	951296			2
<u>2.6</u>	Adapter (incl. part 2.61)	951295			1
<u>2.61</u>	O-ring	951293	D9	*	1
<u>4</u>	Hex. socket screw	902486	M10x100-8.8 ISO 4762		4
<u>5</u>	Hex. socket screw	902656	M10x60-8.8 ISO 4762		4
<u>6</u>	Lock washer	91037	M10 NORD-LOCK		8
<u>7</u>	O-ring	951416	D19	**	2
<u>8</u>	Grease nipple	90200	R1/4		2
<u>9</u>	<b>Spacer</b>	<b>160383</b>			<b>1</b>

<b>10</b>	<b>Spacer</b>	<b>160384</b>			<b>1</b>
<b>11.1</b>	<b>Doser (incl. part 11.3)</b>	<b>158238</b>	<b>RGC-2 (standard for upper tool bushing)</b>		<b>1</b>
<b>11.2</b>	<b>Doser (incl. part 11.3)</b>	<b>158239</b>	<b>RGC-3 (standard for lower tool bushing)</b>		<b>1</b>
<b>11.3</b>	O-ring	950271	D5	**	1
<b>11</b>	Doser (incl. part 11.3)	158240	RGC-4 (optional doser)		2
<b>11</b>	Doser (incl. part 11.3)	158241	RGC-5 (optional doser)		2
<b>11</b>	Doser (incl. part 11.3)	158242	RGC-6 (optional doser)		2
<b>12</b>	Grease cartridge	951370			1
<b>13</b>	O-ring	951418	D11	**	4
<b>21</b>	Nut	951409			1
<b>22</b>	Spring support	951412			1
<b>23</b>	Spring guide	951408			1
<b>24</b>	Spring	950257			1
<b>25</b>	Split pin	950275	8x80 ISO 8752		2
<b>26</b>	Hex. socket screw	951421	M8x10-8.8 ISO 4762		1
<b>27</b>	Lock plate	951410		**	1
<b>28</b>	Piston	150854			1
<b>29</b>	O-ring		D50	**	2
<b>30</b>	O-ring		D25	**	2
<b>31</b>	O-ring		D43	**	1
<b>32</b>	O-ring		D19	**	1
<b>33</b>	O-ring		D62	**	1
<b>34</b>	Guide ring		D16	**	1
<b>35</b>	Cartridge holder	951794			1
<b>36</b>	Body	951423			1
<b>37</b>	Cylinder	951796			1
<b>38</b>	Seal		D16	**	1
<b>39</b>	Supporting ring		D43	**	1
<b>40</b>	Check valve	951767			2
<b>Kit</b>	Service kit for greasing device	152453	Incl. seals and grease nipples		1
<b>41</b>	<b>Adapter kit for manual greasing (incl. parts 41.1-41.10)</b>	<b>160593</b>			<b>1</b>
<b>41.1</b>	<b>Body</b>	<b>160592</b>			<b>1</b>
<b>41.2</b>	Thread element	950267	Helicoil 4132 010 0015		4
<b>41.3</b>	Hex. socket screw	902486	M10x100-8.8 ISO 4762		4
<b>41.4</b>	Lock washer	91037	M10 NORD-LOCK		4
<b>41.5</b>	Plug	915028			1
<b>41.6</b>	Flange plug	90444	BSP 3/8		2
<b>41.7</b>	Grease nipple	90200	R1/4		2
<b>41.8</b>	Plug	151180			1
<b>41.9</b>	Plug	41658	BSP 1/4		1
<b>41.10</b>	<b>Screw</b>	<b>952383</b>	<b>ST4.2x19-C-H ISO 7049</b>		<b>2</b>

\*) Are included in hammers seal set

\*\*\*) Are included in service kit

